





# Quick Guide

## FOR THE CLASS VI WIRELESS ALARM

The following chart lists the basic functions of your alarm system and details the keys you will need to use

**NOTE:** *When a key is pressed on the keypad, the display will go blank for approximately 2 - 3 seconds*

TO PERFORM THESE FUNCTIONS	FOLLOW THESE STEPS
<b>Arm System</b> (Stay Mode)	F1 KEY (Hold for 2.5 SECS) OR Use  Button on Key FOB
<b>Arm System</b> (Away Mode)	F2 KEY (Hold for 2.5 SECS) OR Enter 4 Digit Access Code OR Use  Button on Key FOB
<b>Disarm System</b>	(Enter 4 Digit Access Code) OR Use  Button on Key FOB
<b>Activate System</b> (Panic)	Use  Button on Key FOB
<b>Silence Alarm</b> (After activation)	(Enter 4 Digit Access Code)

These are the basic operations of your system, for further guidance please refer to your User Manual. If you have any queries regarding the operation of your alarm system please contact our Service Department from Monday to Friday 8:00am - 7:00pm / Saturday 9:00am - 1:30pm on either **01704 539300** or **0800 389 1825**



**HOME SECURITY**  
European Environmental Controls Ltd